



Ultrasonic Basic Trainer Model 5150

The Ultrasonic Basic Trainer will help to control your pet's unwanted behavior by emitting a tone that is inaudible to human hearing, but to which animals are sensitive*. The distraction helps break pets from behaviors such as jumping on furniture, barking, chewing, and eating garbage. For maximum results from the Ultrasonic Basic Trainer, please take a moment to read the instructions before using the unit.

Instructions

- The Ultrasonic Basic Trainer operates on the included 9-volt battery. To install the battery, open the battery housing by removing the battery housing cover on the backside of the trainer and take the supplied battery out. Remove the clear battery wrapper and plug the battery terminals to the wire lead. Carefully replace the cover. The unit is now ready to use.
- The unit can operate manually or automatically.

Manual Function:

- Leave the black knob on the top of the trainer in the OFF position by turning it to the extreme right (your right with the trainer's front side facing toward you). Test the unit by depressing the button. The LED will blink red to let you know the unit is operating and an audible hum will be emitted. *This audible hum is not the ultrasonic sound that only your pet can hear.
- Wait for your pet to exhibit the unwanted behavior.
- With the speaker facing away from you and toward your pet, press the button. The tone emitted will interrupt the behavior.
- Some pet owners find it helpful to use verbal commands such as "NO!" or "STOP!" prior to using the Basic Trainer.

**Note: The Ultrasonic Basic Trainer emits an audible hum when activated. This notifies the user the unit is functioning.*

Automatic Function:

- When using the auto mode, the only behavior that will be corrected is barking.
- Turn the knob to the ON position by turning it to the left (your left with the trainer's front side facing you). The LED will light for 5 seconds and shut off. This lets the user know the unit is working.
- The control knob increases the bark receiver sensitivity. After turn ON, continue turning the knob clockwise to increase the sensitivity.

Turned up to its most sensitive level, the trainer emits the ultrasonic distraction in response to very low levels of sound. Turned down to a less sensitive level will mean it will not emit the distracting ultrasonic sound until your dog is barking very loudly. The ultrasonic distraction sound audible only to your pet is always emitted at the same high

level regardless of the sensitivity setting. Whenever the ultrasonic sound is emitted, the trainer also produces a low level audible hum to let you know that it is functioning.

- Position unit within 25 feet of your pet.
- The unit is activated by the dog's barking and emits a tone that interrupts the barking. The tone will be emitted for 3 seconds and will re-arm after 5 seconds.

For Best Results:

- Be consistent with training – pets learn best through repetition.
- Catch your pet in the act. Pets associate the correction only with their current behavior.
- Praise your pet when it exhibits the desired behavior.

For customer service contact

Woodstream Consumer Care:

1-800-800-1819 Ext. 450

8-5 EST, Mon.-Fri.

Look for other Havahart caring control solutions that contain and train

at:www.havahart.com

Made in China- rev UBT082604

R-A

Lititz, PA 17543

(800) 800 -1819

(717) 626 - 2125